



aquauno VIDEO PLUS

DIGITAL WATER TIMER

INSTRUCTIONS MANUAL

VIDEO 2 PLUS 8412
VIDEO 6 PLUS 8413



claber®

I
1

UK
17

F
33

D
49

E
65

P
81

S
97

NL
113

GR
129

UK
18

AQUAUNO VIDEO PLUS

DIGITAL WATER TIMER

THANK YOU FOR CHOOSING OUR TIMER. CAREFULLY READ THE INSTRUCTIONS MANUAL BEFORE PROGRAMMING. EACH SECTION CONTAINS ALL THE INFORMATION REQUIRED FOR THE CORRECT EXECUTION OF EACH OPERATION.

LEGENDA:


- ① 3/4" THREAD FEMALE CONNECTOR
- ② LIQUID CRYSTAL DISPLAY
- ③ BACKWARD PUSH-BUTTON
- ④ FORWARD PUSH-BUTTON
- ⑤ ENTER KEY
- ⑥ QUICK-CLICK SYSTEM FITTING
- ⑦ TIMER UNIT COVER

CE DECLARATION OF CONFORMITY

WE DECLARE UNDER OUR SOLE RESPONSIBILITY THAT THIS PRODUCT IS IN CONFORMITY WITH THE FOLLOWING STANDARDS OR STANDARDIZATION DOCUMENT: EN 55022/CEI ENV 501 40 TO THE PROVISIONS OF THE REGULATIONS 89/336/ EEC.

CE 97

 DANIELE PAPAIS

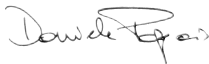






UK
20

CONNECTION TO THE TAP

 UNSCREW EXTERNAL RING NUT **C** AND TIGHTEN 3/4" FEMALE CONNECTOR **A** ON THE 3/4" TAB **B**.
FIX THE TIMER TO THE TAP BY TIGHTENING RING NUT **C**.

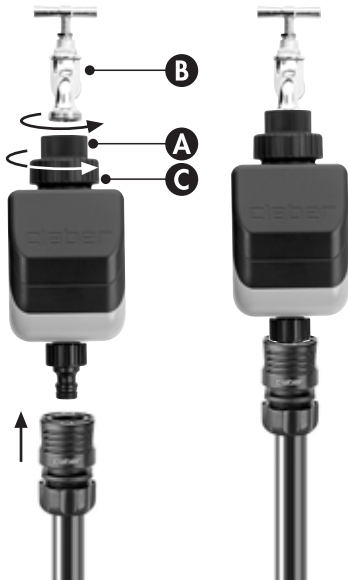



WATER PRESSURE TABLE

UK
21

BAR	0,5	1	2	2,5	3	4	5
l/min	11	16	22	25	27	31	35

VOLTAGE -POWER TABLE

1x 9 VOLT ALKALINE BATTERY.

DURATION: THIS BATTERY IS SUFFICIENT TO POWER THE TIMER FOR AN ENTIRE SEASON WITH AN AVERAGE OF 2 DAILY WATERING CYCLES.

TO PREVENT THE RISK OF CORROSION CAUSED BY ACID, REMOVE THE BATTERY FROM THE TIMER DURING PERIODS OF THE INACTIVITY. WHEN THE CHARGE IS TOO LOW, THE TIMER AUTOMATICALLY INTERRUPTS OPERATION BY CLOSING THE SOLENOID VALVE.

BATTERY CHARGE CONTROL

THE TIMER AUTOMATICALLY REGULATES THE BATTERY CHARGE STATUS. THE UNIT COMES COMPLETE WITH POLARITY INVERSION PROTECTION AND THE BATTERY STATUS INDICATOR. THE BATTERY IS FULLY CHARGED WHEN THE MESSAGE **DA TIT E RY** IS COMPLETE, AND RUN DOWN WHEN THE MESSAGE INDICATED IS **DA TIT**.

 
KEY PAD

THREE BUTTONS ARE USED TO PROGRAM ALL THE PARAMETERS. USING THESE BUTTONS YOU CAN SELECT THE VARIOUS OPERATION MODES AND CHANGE THE CURRENT TIME SETTING, WATERING CYCLES AND DAYS.

EACH TIME YOU PRESS ONE OF THE BUTTONS A BEEP CONFIRMS THE COMMAND GIVEN.



THE DISPLAY

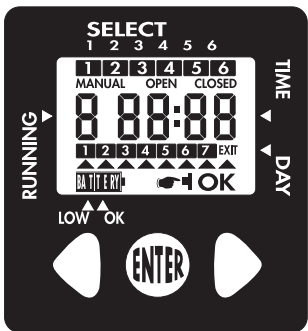




FITTING THE BATTERY

UK
23

USING THE TWO SIDE BUTTONS ON THE FRONT PANEL, SIMPLY DISCONNECT AND PRESS-FIT THE BATTERY TERMINALS.


MAKE SURE THAT THE BATTERY IS CORRECTLY POSITIONED IN ITS HOUSING.

 REPLACE THE BATTERY WITHIN 15 MINUTES TO AVOID LOSING THE SET PROGRAMS

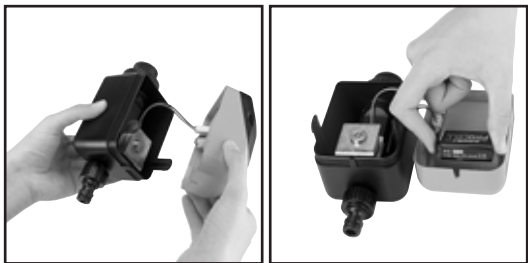

SETTING THE CURRENT TIME

 AS SOON AS THE BATTERY HAS BEEN CONNECTED ALL THE DISPLAY SECTIONS SWITCH ON. THE VALVE OPENS FOR 2 SECONDS AND THE TIMER SETS TO 00:00.

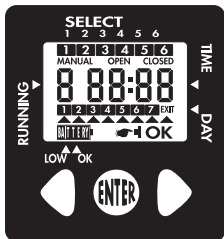

BY PRESSING THE CENTRAL **ENTER** BUTTON THE MESSAGE OK IS DISPLAYED. PRESS **◀** OR **▶** TO INCREASE OR DECREASE THE TIME SETTING ACCORDINGLY. FOR RAPID MOVING, SIMPLY HOLD THE RELATIVE BUTTON PRESSED DOWN UNTIL YOU REACH THE TIME SETTING REQUIRED. TO EXIT FROM THIS PAGE, PRESS **ENTER**.

PROGRAMMING

THE PROGRAM COMPRISES A NUMBER OF PAGES, EACH OF WHICH CONTAINS TWO FUNCTIONS:

1. PROGRAM DISPLAY
 2. PROGRAM MODIFICATION
- PRESS **▶** TO MOVE FORWARDS THROUGH THE PROGRAMS.



PROGRAM 1 - START PROGRAM 1 (OPEN) - STOP (CLOSED)
PROGRAM 2 - START PROGRAM 2 (OPEN) - STOP (CLOSED) ETC.

UK
25

ATTENTION: IF, WHEN OPENING THE FIRST PROGRAM (OPEN) YOU HAVE WRONGLY PUSHED **ENTER** TWICE, THE NUMBER OF THE PROGRAM (1) WILL BE DISPLAYED WITH RUN TIME FROM 00:00 TO 00:01. TO RE-SET THE FIRST PROGRAM YOU HAVE TO CANCEL THE ONE WRONGLY SET (PAGE 14)

FOR EXAMPLE:

 





UK
26




WATERING PROGRAM 1 IS SET TO START (OPEN) AT 10:26
AND END (CLOSED) AT 10:35

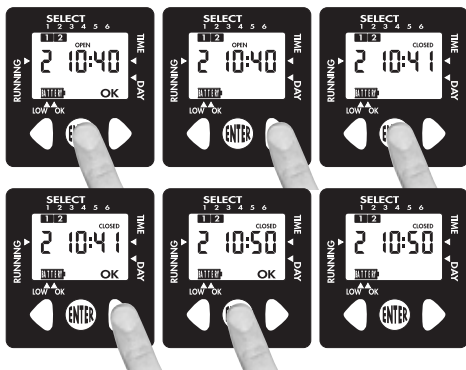



WATERING PROGRAM 2 IS SET TO START AT 10:40 AND
 END (CLOSED) AT 10:50
 BY MOVING WITH  YOU CAN SET THE OTHER
 PROGRAMS IN THE SAME WAY.
 PRESS  TO RETURN TO TIME-SETTING MODE.
 MOVE WITH  TO ACCESS WEEKLY WATERING MODE.

 WEEKLY PROGRAMMING

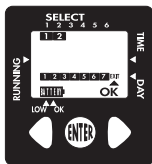

WARNING: DAY (1) IS THE FIRST DAY THE FIRST PROGRAM IS SET. EXAMPLE: THE FIRST PROGRAM WAS SET ON THURSDAY – DAY (1) = THURSDAY (AS DISPLAYED ON THE CURRENT TIME PAGE).

WARNING: DAY (1) IS A REFERENCE FOR THE WEEKLY PROGRAM MANAGEMENT.

EXAMPLE: IF DAY (1) = THURSDAY AND YOU DO NOT WISH TO RUN A WATERING CYCLE ON FRIDAYS, ELIMINATE DAY (2)

PRESS ◀ OR ▶ TO MOVE THE CURSOR TO THE NUMBER OF THE DAY YOU WISH TO OMIT AND PRESS **ENTER** TO DELETE SAID DAY. TO EXIT FROM THIS PAGE, POSITION THE CURSOR UNDER EXIT AND CONFIRM WITH **ENTER**.

AFTER EXITING THE WEEKLY WATERING CYCLE PAGE, PRESS ▶ TO DISPLAY MANUAL FUNCTION MODE.



PRESS ◀ (OPEN) TO OPEN THE VALVE AND ▶ (CLOSED) TO CLOSE IT AGAIN. THE VALVE CLOSES AUTOMATICALLY AFTER 15 MINUTES IN ANY CASE.



TO DELETE A PROGRAM USE THE ▶ KEY TO MOVE FORWARDS UNTIL YOU REACH THE PROGRAM TO BE CANCELLED. THE DELETION PHASE (CLOSED) IS THEN ENTERED BY PRESSING ENTER. TO DELETE THE PROGRAM, SIMULTANEOUSLY PRESS BUTTON ◀ AND ▶, TAKING CARE TO PRESS THE ◀ BUTTON SLIGHTLY IN ADVANCE.

EACH TIME YOU PRESS TO ACCESS A PROGRAM AND DO NOT MODIFY ITS DATA WITHIN 10 SECONDS, THE PROGRAM EMITS AN ACOUSTIC SIGNAL AND 🔊.

INSTRUCTIONS

 
 
- DO NOT ALLOW THE APLIANCE TO FREEZE OVER.
- DO NOT USE AQUAUNO VIDEO ON HOSES CONTAINING CHEMICAL SUBSTANCES OR ANY LIQUID OTHER THAN WATER
- DO NOT USE HEAVY OBJECTS TO PRESS THE BUTTONS WHICH HAVE BEEN SPECIALLY DESIGNED TO RESPOND TO THE TOUCH OF A FINGER
- DO NOT OPERATE AQUAUNO VIDEO WHEN INLET PRESSURE EXCEEDING 10 BAR.
- ONLY USE NEW BATTERIES AND DULY REPLACE WHEN INDICATED BY THE DISPLAY.
- WHEN NOT PROGRAMMING, KEEP THE COVER CLOSED TO PROTECT THE DISPLAY FROM EXPOSURE TO SUNLIGHT AND HUMIDITY.
- AT LEAST ONCE A SEASON, CLEAN THE SINHTHETIC FOAM FILTER UNDER RUNNING WATER. IN THE CASE OF HARD OR RAIN WATER, THE FILTER MUST BE CLEANED MORE FREQUENTLY.

UK
30

CONNECTING TO A RAIN SENSOR

THE AQUAUNO VIDEO CAN BE CONNECTED TO A RAIN SENSOR (CLABER CODE 90915). THE RAIN SENSOR CUTS OFF THE AQUAUNO VIDEO WATERING PROGRAM IN CASE OF RAIN, RESTORING IT AUTOMATICALLY WHEN THERE IS NO MORE WATER LEFT IN THE SENSOR.

THE RAIN SENSOR MUST BE CONNECTED TO THE TWO SPECIAL ELECTRICAL CONTACTS PROVIDED INSIDE THE AQUAUNO VIDEO PROGRAMMING MODULE, USING THE CONNECTOR SUPPLIED WITH THE SENSOR. THE TWO-WIRE CABLE MUST BE FED IN THROUGH THE SEAT PROVIDED IN THE BOTTOM OF THE AQUAUNO VIDEO. BEFORE FITTING THE CONNECTOR, REMOVE THE JUMPER PLACED OVER THE TWO CONTACTS. FOR THE CONNECTION DIAGRAM, SEE RIGHT.

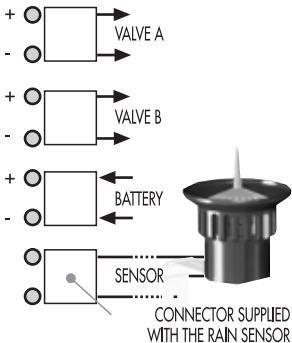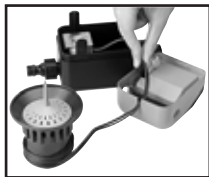

UK
31

claber®

SERVICE	SERVICE	SERVICE
1	2	3

WARRANTY

THE WATER TIMER IS WARRANTED FOR A PERIOD OF TWO YEARS FROM THE DATE OF PURCHASE, THAT IS CERTIFIED BY THE INVOICE OR RECEIPT WHEN PURCHASING.

THE WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, MISUSE OR ABUSE OR IN LACK OF THE BILL SHOWING THE PURCHASE DATE.

WRITE THE SERIE NUMBER

--	--	--	--	--	--	--

PLEASE TURN OVER FOR THE GENERAL CONDITIONS OF WARRANTY.



GENERAL CONDITIONS OF WARRANTY

UK
32

CLABER GUARANTEES THAT ITS APPLIANCE DOES NOT PRESENT DEFECTS REGARDING THE MATERIALS EMPLOYED AND CONSTRUCTION. DURING THE 24-MONTH PERIOD FOLLOWING THE DATE OF DELIVERY TO THE CUSTOMER, CLABER SHALL EITHER REPLACE OR REPAIR THE DEFECTIVE PRODUCT FREE OF CHARGE IF THE APPLIANCE HAS BEEN EMPLOYED IN NORMAL WORKING CONDITIONS, IF MAINTENANCE HAS BEEN CARRIED OUT BY AUTHORIZED PERSONNEL AND IF IT HAS NOT BEEN MODIFIED IN ANY WAY. CLABER SHALL NOT BE LIABLE FOR DAMAGE DUE TO THE CUSTOMER'S MISUSE OR TO ERRORS OCCURED DURING INSTALLATION. FOLLOW THE INSTRUCTIONS AND INSTALLATION PRESCRIPTIONS REGARDING THE USE OF OUR PRODUCT.

CLABER SHALL NOT BE LIABLE FOR DAMAGE OF PRODUCTS MANUFACTURED BY OTHER COMPANIES EVEN IF COMBINED WITH THEIR APPLIANCES. THE PRODUCT CAN BE MAILED TO OUR ASSISTANCE CENTER ONLY IF THE CUSTOMER HAS BEEN AUTHORIZED TO DO SO; THE RISKS WHICH OCCUR DURING TRANSPORT ARE ENTIRELY CHARGED TO THE CUSTOMER. REFER TO THE GENERAL SALES CONDITIONS IN FORCE WHATEVER ELSE SHOULD OCCUR. FOR ANY FURTHER INFORMATION ON OUR SERVICING, YOU MAY CONTACT CLABER SPA
TEL. 0039/0434/958836 - FAX 0039/0434/957193.
P.O. BOX 159 - 33170 PORDENONE - ITALY.

www.claber.com
info@claber.com

claber[®]